


CONNECTING THE TRANSFORMER

The required wire for connecting the transformer to the alarm panel will be a 3 core Cabtyre 1 mm.

Connect the brown and blue wires on one end of the wire to the AC connectors located on the left hand bottom side of the alarm panel. These are indicated by the ~ sign.

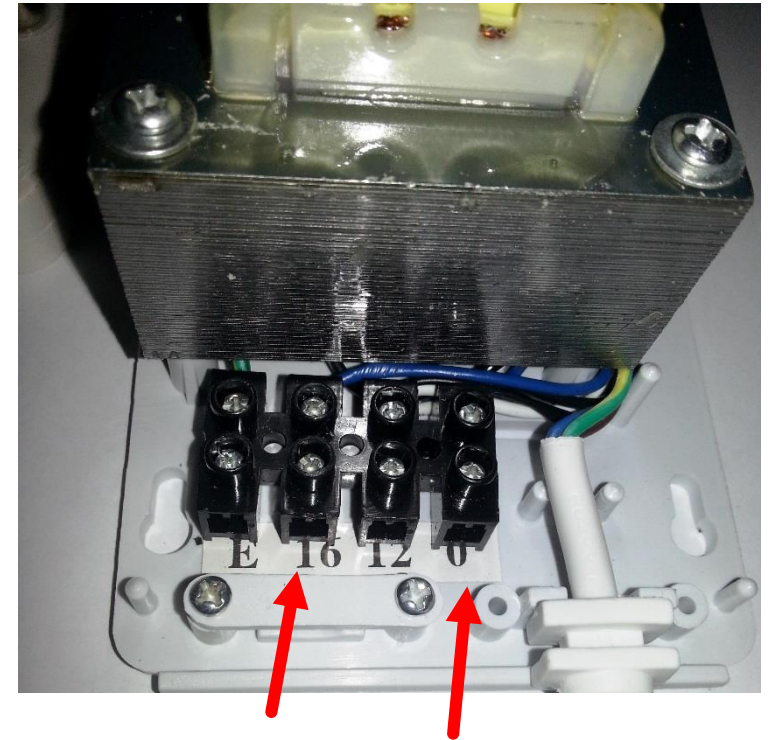

Connect the opposite side of the brown and blue wires to the **0** and **16** connectors on the transformer respectively. Note that it is recommended to use a surge protected plug on the transformer to guard against possible surge and lightning damage.